

READ THESE TOP TIPS FOR THE ULTIMATE PERFORMANCE FROM YOUR ELECTRA APPLIANCE

- Transit bolts must be removed before using the machine. On the back of the machine you will find 4 bolts, look in the instruction book headed 'unpacking instructions'.
- The programme selector knob **WILL NOT** move as the programme progresses on models that have a **START BUTTON**.
TO RE_SET the programme on machines that have a **START BUTTON**, turn the selector dial to **STOP** or **RE-SET** with the mains power on, then wait until the **START BUTTON** is flashing, then re-select the programme required.
On washer dryers as above, also the dryer selector knob will not move. When in cool down the **DRYER LIGHT** will flash.
- The machine will sense an out of balance load, this will stop the machine spinning, adjust the wash load, if a small load add more garments, **RE-SET** and **RE-SPIN**.
- Always check pockets for foreign objects, for example coins, keys, etc. This can cause serious damage to the machine.
- Check and clean the filter at least once a month. If it is not checked regularly the machine could stop pumping and spinning.
- To avoid bad smells inside the machine you need to carry out an antibacterial wash at 90 degrees, with a biological powder, at least once a month.
- Always wait 3 minutes before opening the door after a programme has finished to avoid damage to the appliance. This is a safety feature.
- Remember to clean the soap dispenser regularly. There are 2 types of soap dispenser.
To remove the dispenser:
Type 1: Inside the soap drawer there is a word 'Push', press and pull to remove the drawer.
Type 2: This type has no push button to remove the drawer, hold firmly and pull. At the same time push underneath the drawer.

INSTALLATION GUIDE

Dear Customer,


please follow these very important safety and installation instructions before using your Machine. **Make sure the machine is not connected to the electricity supply during installation.** For information that is more detailed please refer to the instruction book.

1. Remove the packaging of the appliance


2. Remove the transit bolts:

There are 4 fitted of the rear to your machine. These bolts prevent damage to the machine while it is being transported. You must remove the four-transit bolt, complete with spacer before you use the machine. If you do not do this, it will damage your machine. Use a standard spanner to remove the bolts. First, unhook the grey hose and proceed as follow.

Model A

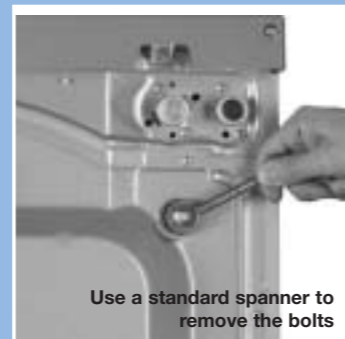




Model B

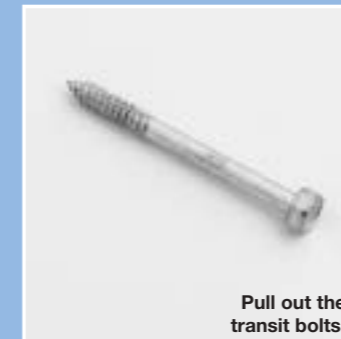

For advice telephone
08705 168299


3. Connecting the hoses to the water taps.

When fitting fill hoses on machines that have hot and cold fill hoses, the hot supply is connected to the valve with the red/pink insert, the cold supply is connected to the white valve with the white insert, and you must connect both hoses. If using only cold fill a Y hose connection has to be fitted to the main cold tap. If a one hose cold fill machine, make sure the hot tap that is not been used is turned off and not leaking. If there is a leak, turn off the water supply, disconnect the hoses and check that the sealing washers are in place. See plumbing installation in the instruction booklet.

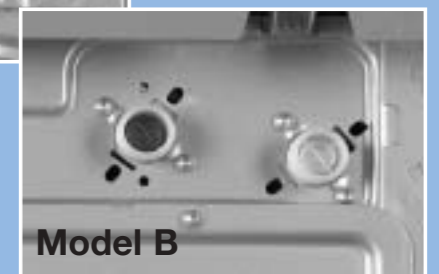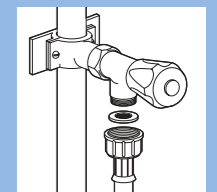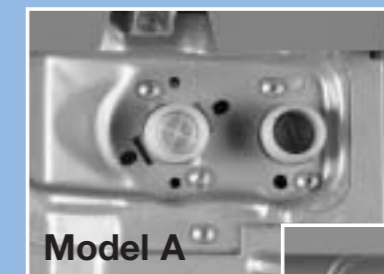

4. Connecting the machine into a drain.

A) Into a standpipe.
Fit the U support to the hose, install the hose as shown, place the drainage hose approximately 100mm to 200mm into the standpipe. Make sure the top of the standpipe is at least 600 mm from the floor. Have a look at the instruction manual for more details.

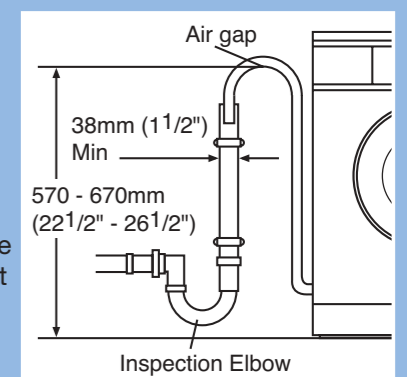

B) Into an under sink system.
Where it connects to the waste water pipe cut end off spigot or remove the blanking cap.

